



Assembly of Bi-Lock's QCC - Camlock

IMPORTANT!


Keep the Brass Adapter in the right position (as shown in drawing **C**), before inserting the manufacturing key.
Pay attention to the right position of the grooves and the slot. (inside view)
Put stopplate on thread. **A.** counter-clockwise or **B.** clockwise position. (rear view)
Put the nut on the thread •

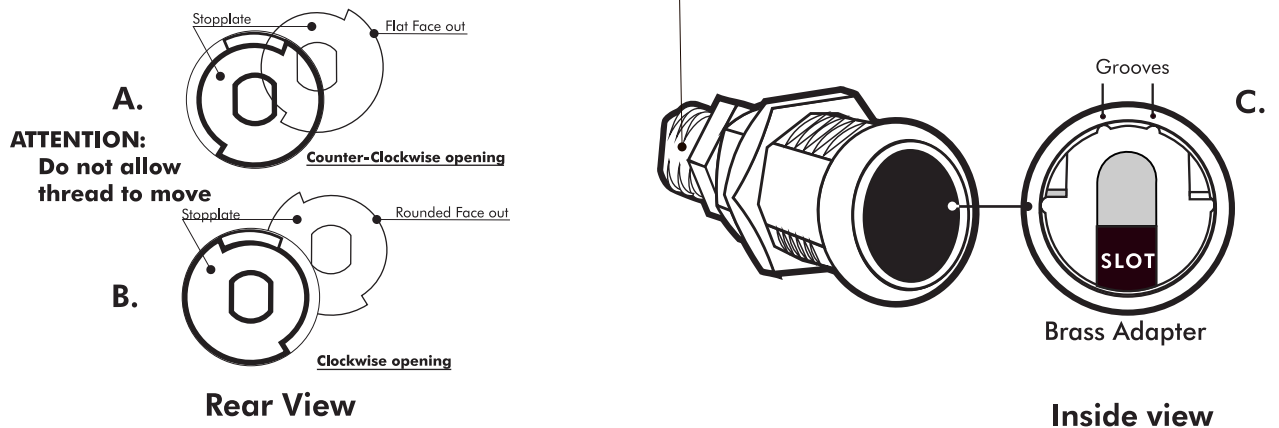


inside view

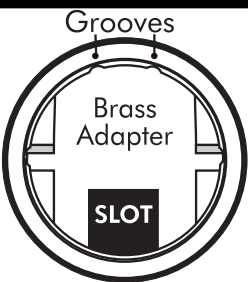



BiLock New Generation*

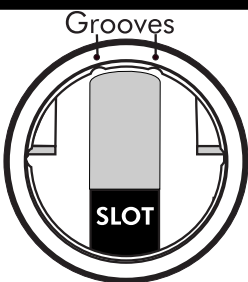

BiLock Exclusive
2016 - 2019 **

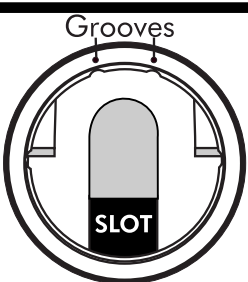

BiLock Exclusive
2019 > ...**

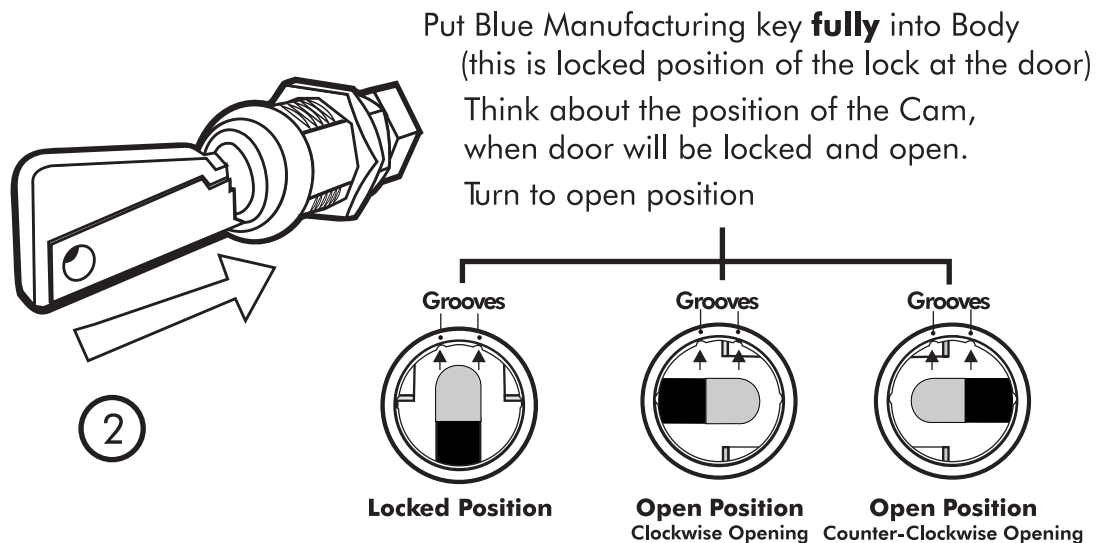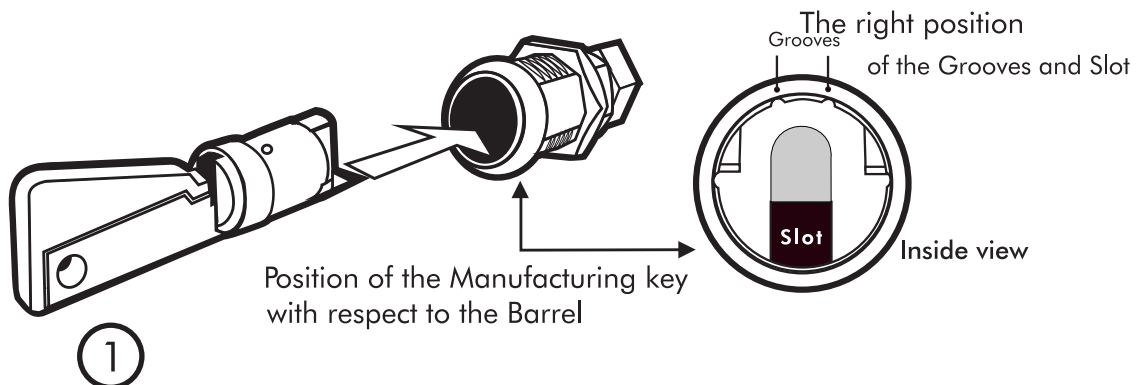

CASINO LOCKING SYSTEMS

Reinier Rondhorstdijk 32 - 3059 SM Rotterdam - The Netherlands - Tel.: 31(0)10 - 228 16 51

E-mail: info@casinolock.com - Internet: www.casinolock.com

* only for New Generation plugs

** for Exclusive and New Generation plugs


Installation of Bi-Lock's QCC - Lock

2.1

1. Always use CLOCKWISE opening when possible
2. Always use 90° stopplate when possible.

2.2

Position of the cam lock

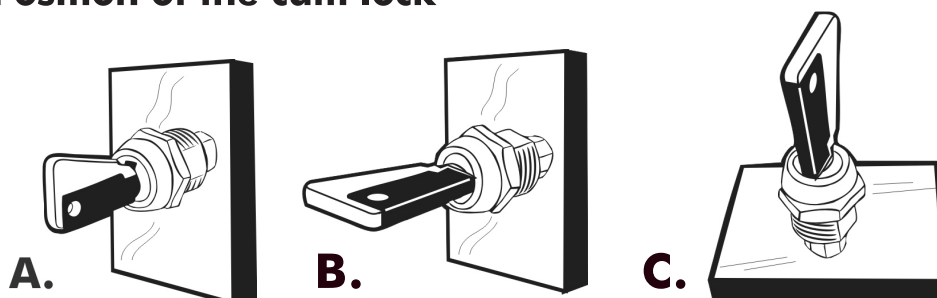

A : Teeth of the key are pointing up.


B+C : Teeth of the key, are pointing away from the user.

Drawings are showing lock in locked position

2.3

Adjust Lock Body after mounting


- ① Tie the big nut
- ② Adjust lock body straight in position with 16 mm spanner

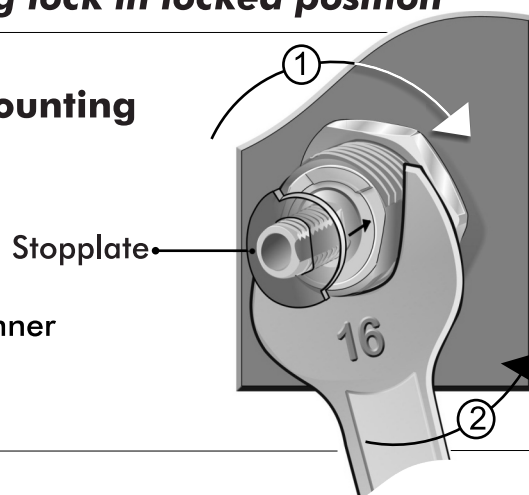

2.4




How to tie the small nut at the tail of the lock

- ① Keep the cam with 16 mm spanner or plier in 45° position.
- ② Keep cam in this position and tie small nut with 11 mm spanner. (cam in free position!)

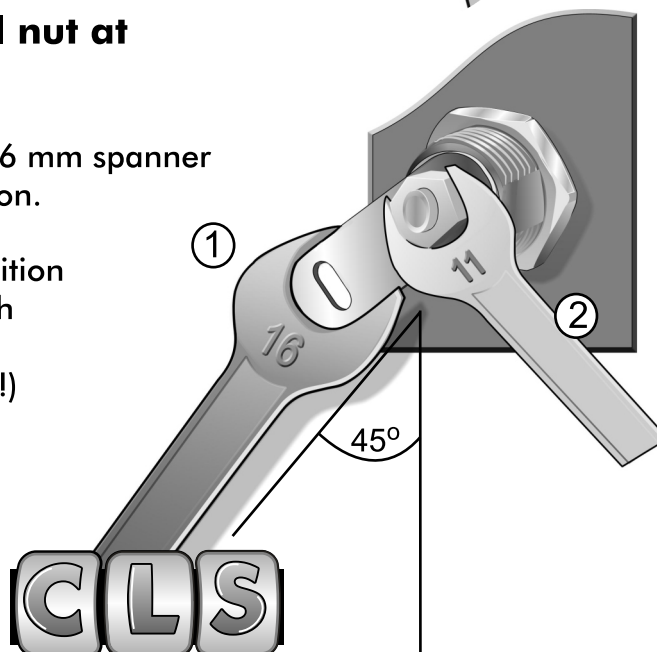

CASINO LOCKING SYSTEMS

Installation of Bi-Lock's QCC Camlock at Stackbox/Billbox

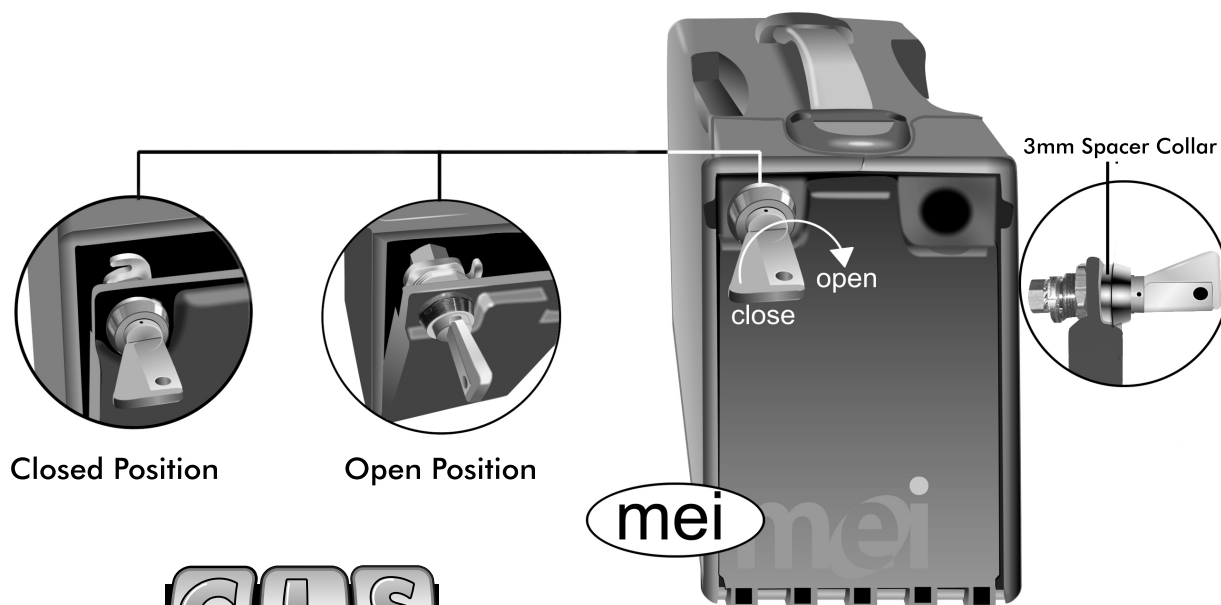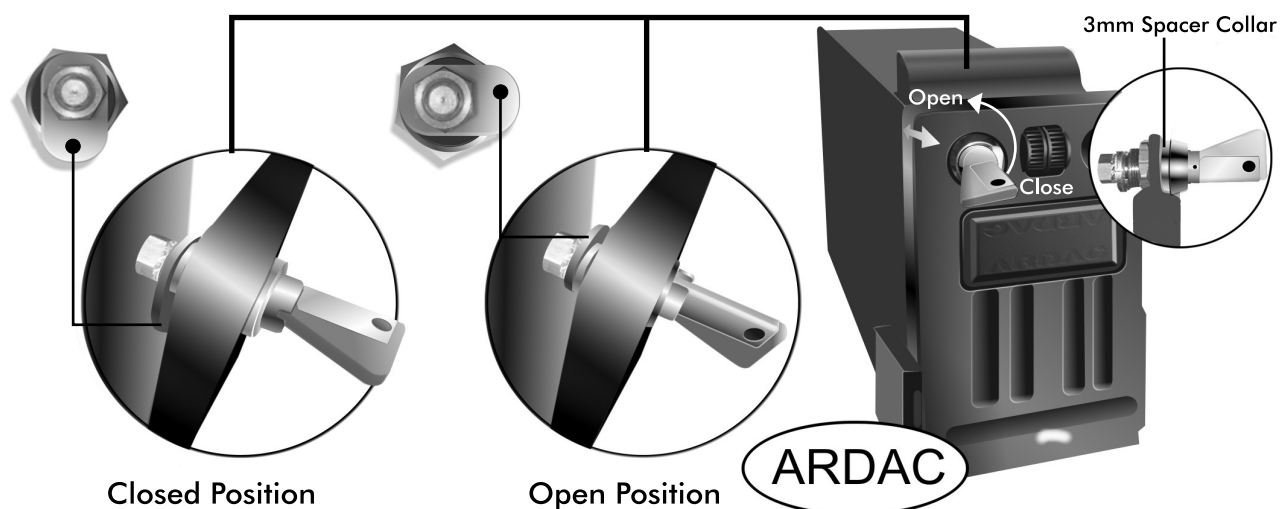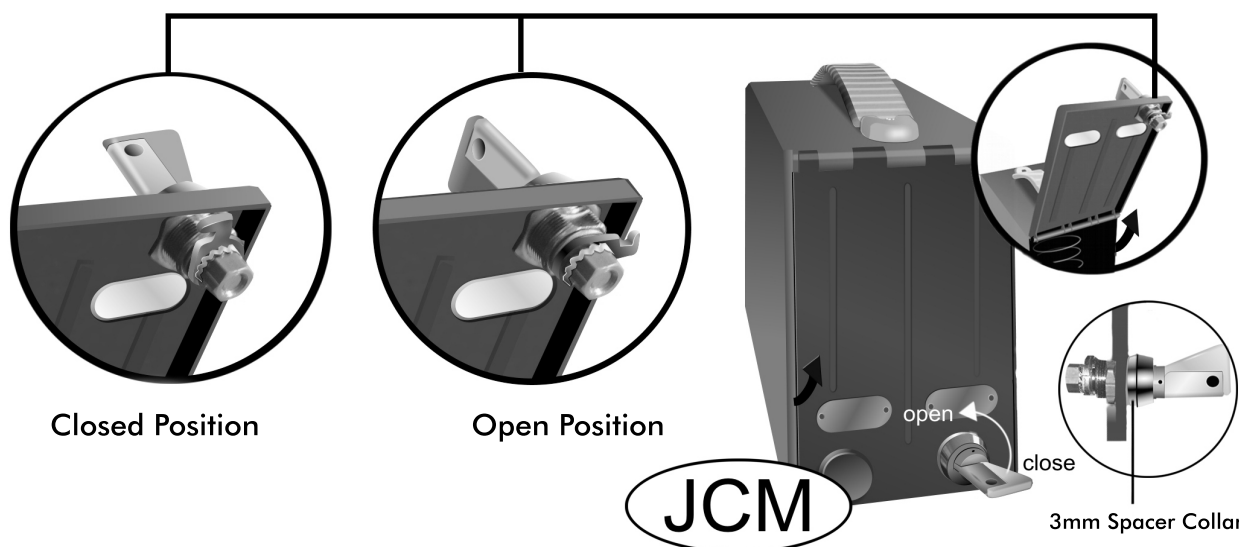

CASINO LOCKING SYSTEMS

E-mail: info@casinolock.com - Internet: www.casinolock.com