



Assembly of Bi-Lock's QCC - Camlock

IMPORTANT!


Keep the Brass Adapter in the right position (as shown in drawing **C**), before inserting the manufacturing key.
Pay attention to the right position of the grooves and the slot. (inside view)
Put stopplate on thread. **A.** counter-clockwise or **B.** clockwise position. (rear view)
Put the nut on the thread •

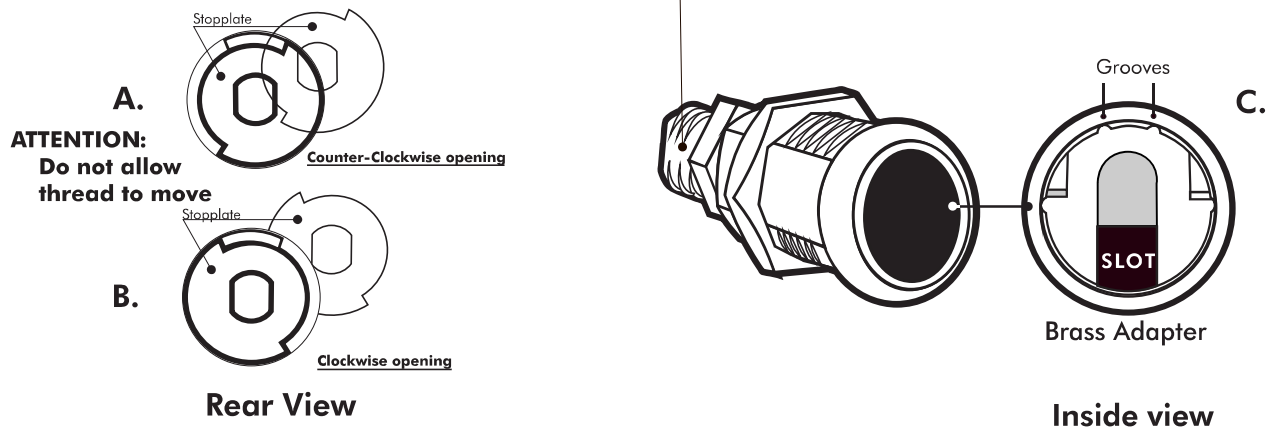


inside view

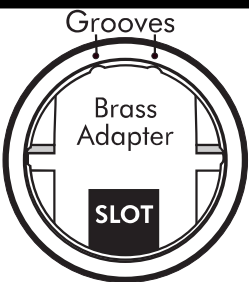


BiLock New Generation*

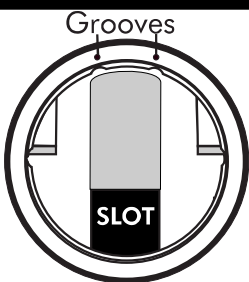



BiLock Exclusive
2016 - 2019 **

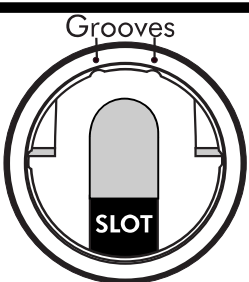

BiLock Exclusive
2019 > **

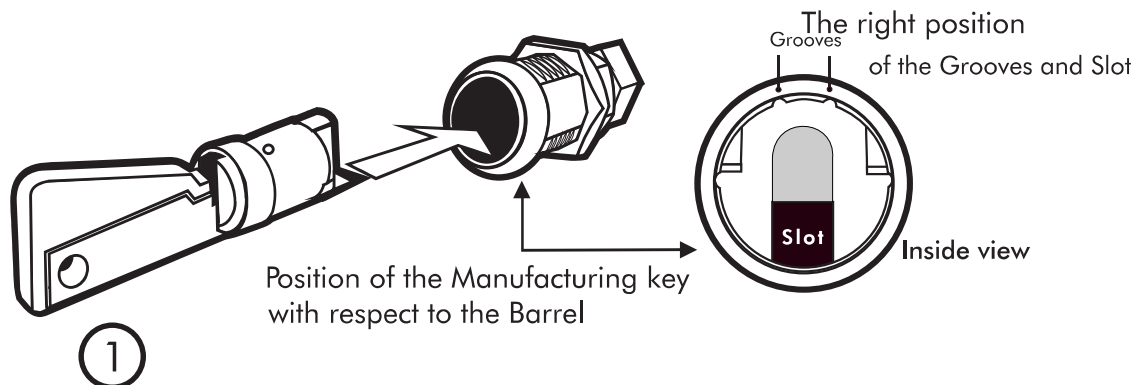

Put Blue Manufacturing key **fully** into Body
(this is locked position of the lock at the door)
Think about the position of the Cam,
when door will be locked and open.
Turn to open position

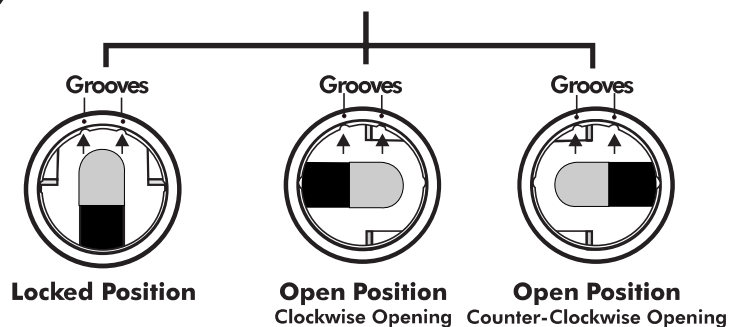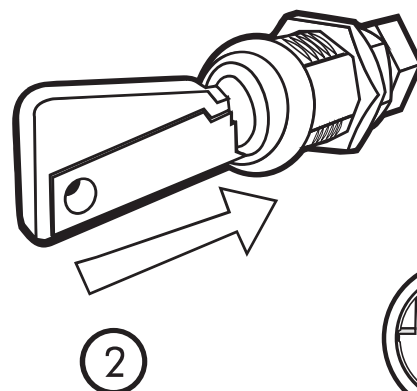

CASINO LOCKING SYSTEMS


Installation of Bi-Lock's QCC - Lock

2.1

1. Always use CLOCKWISE opening when possible
2. Always use 90° stopplate when possible.

2.2

Position of the cam lock

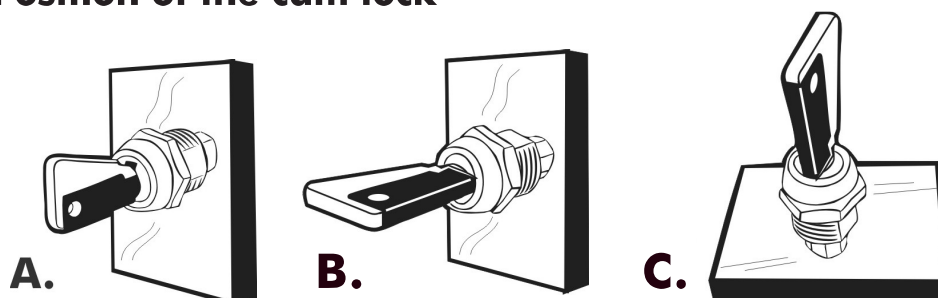

A : Teeth of the key are pointing up.


B+C : Teeth of the key, are pointing away from the user.

Drawings are showing lock in locked position

2.3

Adjust Lock Body after mounting


- ① Tie the big nut
- ② Adjust lock body straight in position with 16 mm spanner

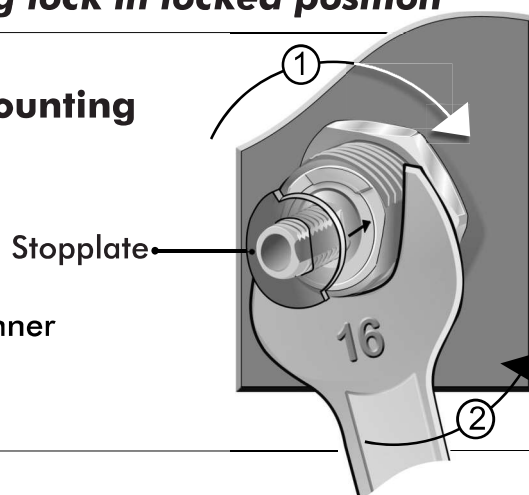

2.4




How to tie the small nut at the tail of the lock

- ① Keep the cam with 16 mm spanner or plier in 45° position.
- ② Keep cam in this position and tie small nut with 11 mm spanner. (cam in free position!)

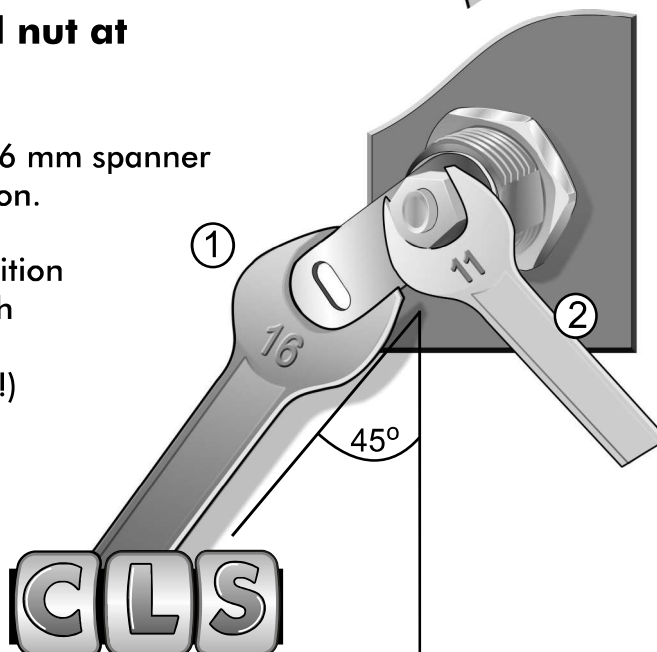

CASINO LOCKING SYSTEMS

Installation of Bi-Lock's QCC Camlock at Stackbox/Billbox

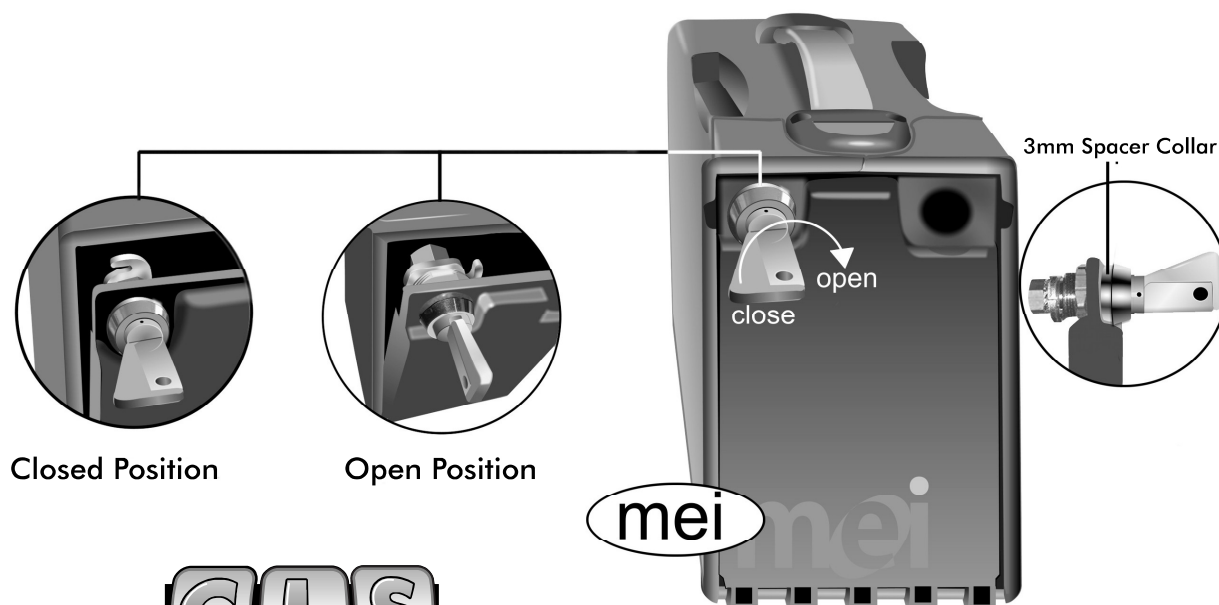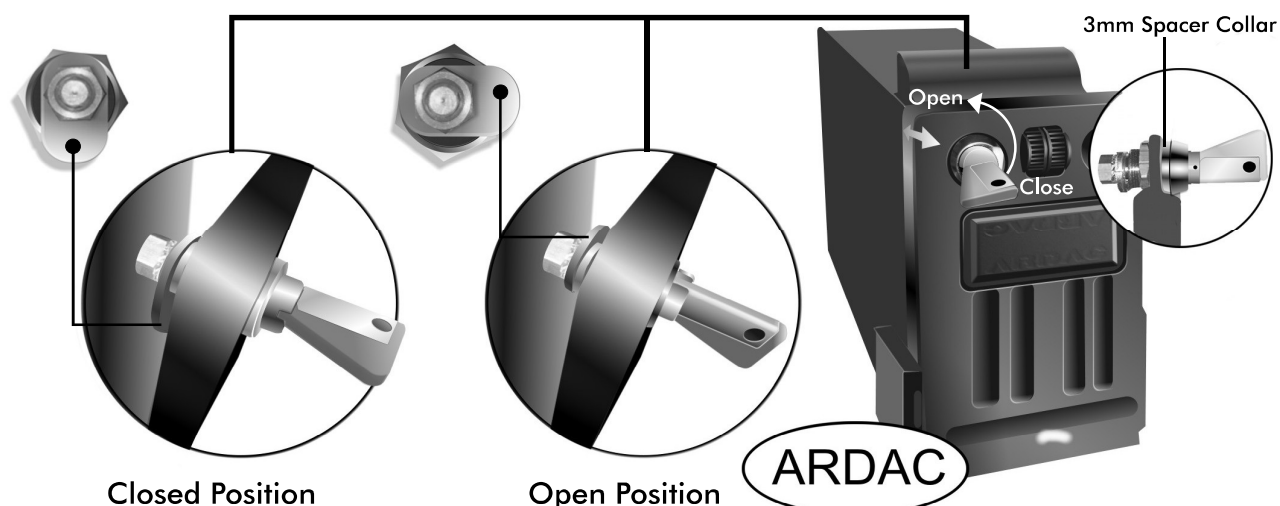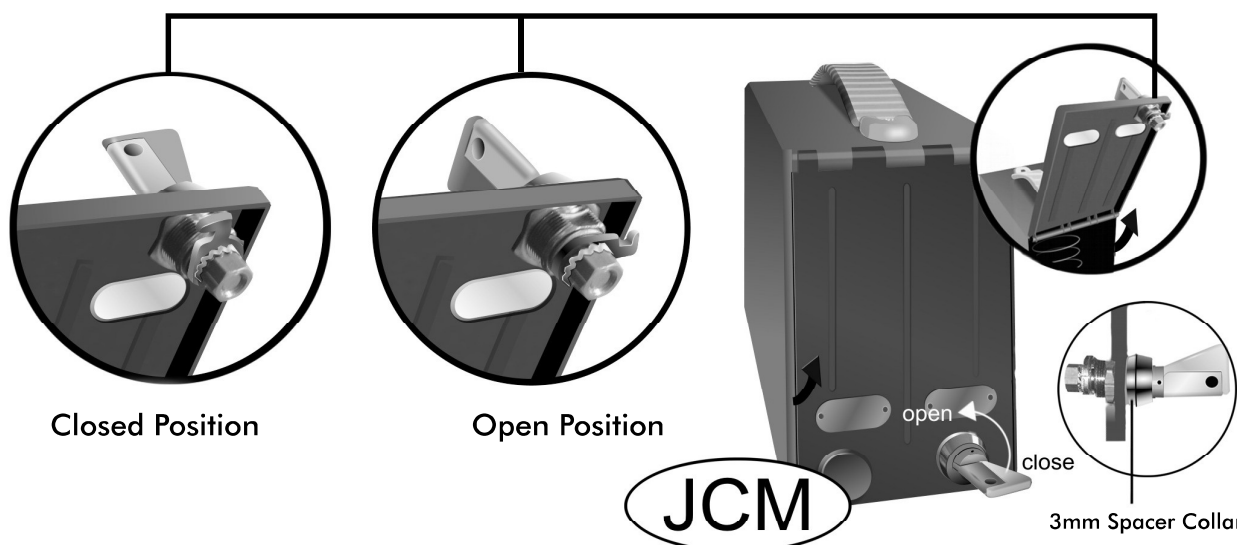

CASINO LOCKING SYSTEMS

E-mail: info@casinolock.com - Internet: www.casinolock.com